

JST connector part number : **B 3B-PH-K-S** for Top Entry Type (use on INEX controller board) and **S 3B-PH-K-S** for Side Entry Type (use on most of INEX sensor board)

JST Housing part number : **PHR-3**

JST contacts part number : **SPH-002T-0.5S** or **0.5L**.

Suitable wire cable size for JST contact and housing : **AWG #24 to 30**

